



1. Change engine oil and replace oil filter.
2. Check transmission for leaks.
3. Change transmission fluid and clean magnetic drain plug.
4. Inspect brake lines and system for leaks.
5. Replace brake fluid.
6. Inspect clutch lines and clutch system for leaks.
7. Replace clutch fluid.
8. Inspect oil lines and system for leaks.
9. Lubricate the front brake hand lever, side stand bushing, throttle control grip, clutch control hand lever.
10. Inspect Throttle Control Cables and Adjust as needed.
11. Check rear brake pedal adjustment.
12. Inspect brake pads and discs for wear.
13. Check and adjust rear drive belt.
14. Check primary chain housing for leaks.
15. Check and adjust primary chain
16. Change primary drive oil.
17. Inspect air filter and clean/replace as required
18. Inspect fuel and fittings for leaks.
19. Clean Throttle Body
20. Check battery and clean battery connections.
21. Check operation of all electrical equipment and switches.
22. Replace spark plugs.
23. Check for stored Diagnostic Trouble Codes (DTCs).
24. Check tires for pressure and signs of wear.
25. Check wheel spoke tightness.
26. Check rear shock absorber mounting bolts and inspect for leaks
27. Check swingarm pivot bolts for proper tightness.
28. Replace front fork oil.
29. Repack steering head bearings and re-torque steering head bearings. (20,00 mile service intervals only).
30. Check alignment.
31. Check tightness of all fasteners, except engine head bolts.
32. Inspect fuel tank mount grommets.
33. Conduct road test.