



1. Change engine oil and replace filter
2. Check engine, transmission and primary for leaks.
3. Check and inspect transmission fluid.
4. Check and inspect primary drive oil.
5. Inspect oil lines and system for leaks.
6. Check battery and clean battery connections.
7. Inspect fuel lines and fitting for leaks.
8. Inspect clutch lines and system for leaks..
9. Inspect brake lines and system for leaks
10. Inspect air filter and replace as required
11. Check spark plug condition and replace as required.
12. Check throttle operations
13. Check and adjust inner primary chain.
14. Check and adjust rear drive belt.
15. Check operation of all electrical equipment and switches.
16. Check and inspect brake fluid level
17. Check and inspect clutch fluid level
18. Inspect brake pads and discs for wear
19. Check tires for pressure and signs of wear.
20. Conduct road test
21. Clean throttle body
22. Check for stored Diagnostic Trouble Codes (DTCs).
23. Check wheel spoke tightness.