



1. Change engine oil and replace filter
2. Change transmission fluid and clean magnetic drain plug.
3. Check brake fluid level and condition.
4. Inspect brake lines and system for leaks.
5. Inspect oil lines and system for leaks.
6. Inspect clutch fluid level and condition.
7. Inspect clutch lines and system for leaks.
8. Lubricate the front brake hand lever, side stand bushing, throttle control grip, and clutch control hand lever.
9. Inspect Throttle Control Cables and Adjust as needed.
10. Check rear brake pedal adjustment.
11. Inspect brake pads and discs for wear.
12. Check and adjust inner primary chain.
13. Change primary drive oil.
14. Check and adjust rear drive belt.
15. Inspect air filter and replace as required.
16. Inspect fuel lines and fittings for leaks.
17. Clean battery connections.
18. Check operation of all electrical equipment and switches.
19. Clean throttle body
20. Check spark plug condition and replace as required.
21. Check for stored Diagnostic Trouble Codes (DTCs).
22. Check tires for pressure and signs of wear.
23. Check wheel spoke tightness.
24. Check rear shock absorber mounting and inspect for leaks.
25. Check swing arm pivot bolts for proper tightness.
26. Check engine mount fasteners (first 500 mile service only).
27. Check alignment.
28. Check tightness of all fasteners, except engine head bolts.
29. Conduct road test.