Primary Oil Change

To change the primary oil warm the bike to operating temperature by riding it for 10-15 minutes. The primary oil drain plug is located under and to the rear of the inner primary cover

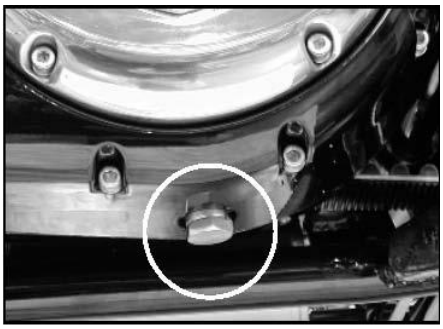

Figure 34: *Primary drain plug*

1. Place a catch basin with a volume of at least 30 ounces below the drain plug.
2. Remove the magnetic plug and let the oil drain from the bike.
3. Remove any debris from the magnetic drain plug.
4. Replace the drain plug and torque to 11-13 foot pounds.
5. Remove the small round inspection cover.
6. Pour 22oz/550cc of Indian® brand primary oil through the inspection hole.
7. Reinstall the round inspection
8. Tighten the fasteners to 95-115 inch pounds.