Place a drain pan under the right fork tube. Remove the drain plug and copper sealing washer from the lower rear of the fork using a #3 Phillips screwdriver.

Figure 55 – Fork tube drain plug

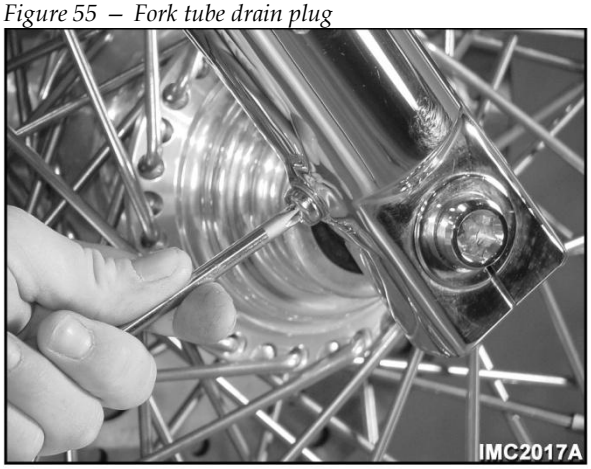

Figure 55 — Fork tube drain plug

Inspect the copper sealing washer for damage. Replace as necessary.
Apply the front brake.
Gently push down on the handlebars to remove oil from the right fork tube. Continue pushing the handlebar up and down until all of the oil is removed from the fork tube.

Remove headlamp bezel. (see Headlight Bezel Removal)

REMOVAL

1. Remove windshield (if equipped)
2. Remove handlebar riser cover fasteners and cover
3. Remove spot lamp bar fastener (one side only)
4. Remove front bezel cover upper fastener
5. Unplug head lamp plug
6. Remove (4x) side mount fasteners

Caution that bezel does not fall or drop when removing fasteners

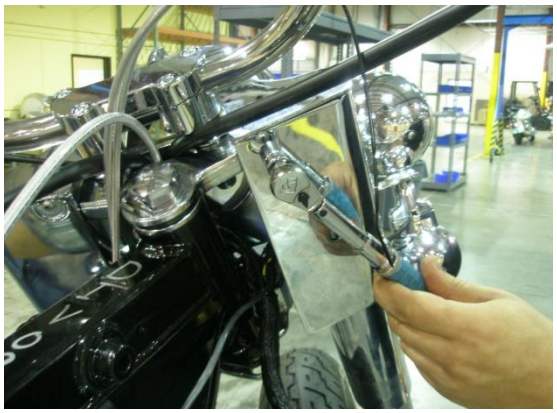

7. Remove Head light Bezel

Procedure

Install the drain plug and copper sealing washer into the right fork tube and tighten to specification. Torque to 6-8Ft#.
Remove the fork cap.

Add 10.5oz of Indian Fork Oil.

Install fork cap and Torque to 11-18Ft#

Perform the same procedure on the left fork tube.

Install Headlamp bezel
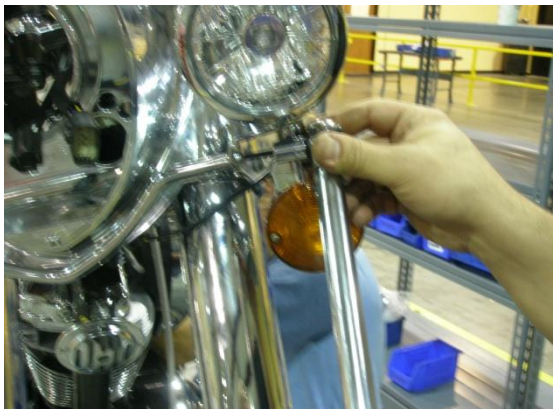
1. Carefully place Head lamp bezel on motorcycle
2. Install (4x) fasteners by hand to hold bezel in place. Do not torque at this time
3. Install headlamp plug
4. Install front bezel cover (one side)
5. Install front bezel cover upper fastener. Torque 22-28 in-lbs
6. Repeat for other side
7. Torque side mount fasteners (4x). Torque to 16-20 Ft/ Lb
8. Install spot lamp bar fastener. Torque to 16-20 Ft/ lb.
9. Install Handlebar cover riser and fasteners (2x). Torque 100-110 in-lbs
10. Install windshield (if equipped)