


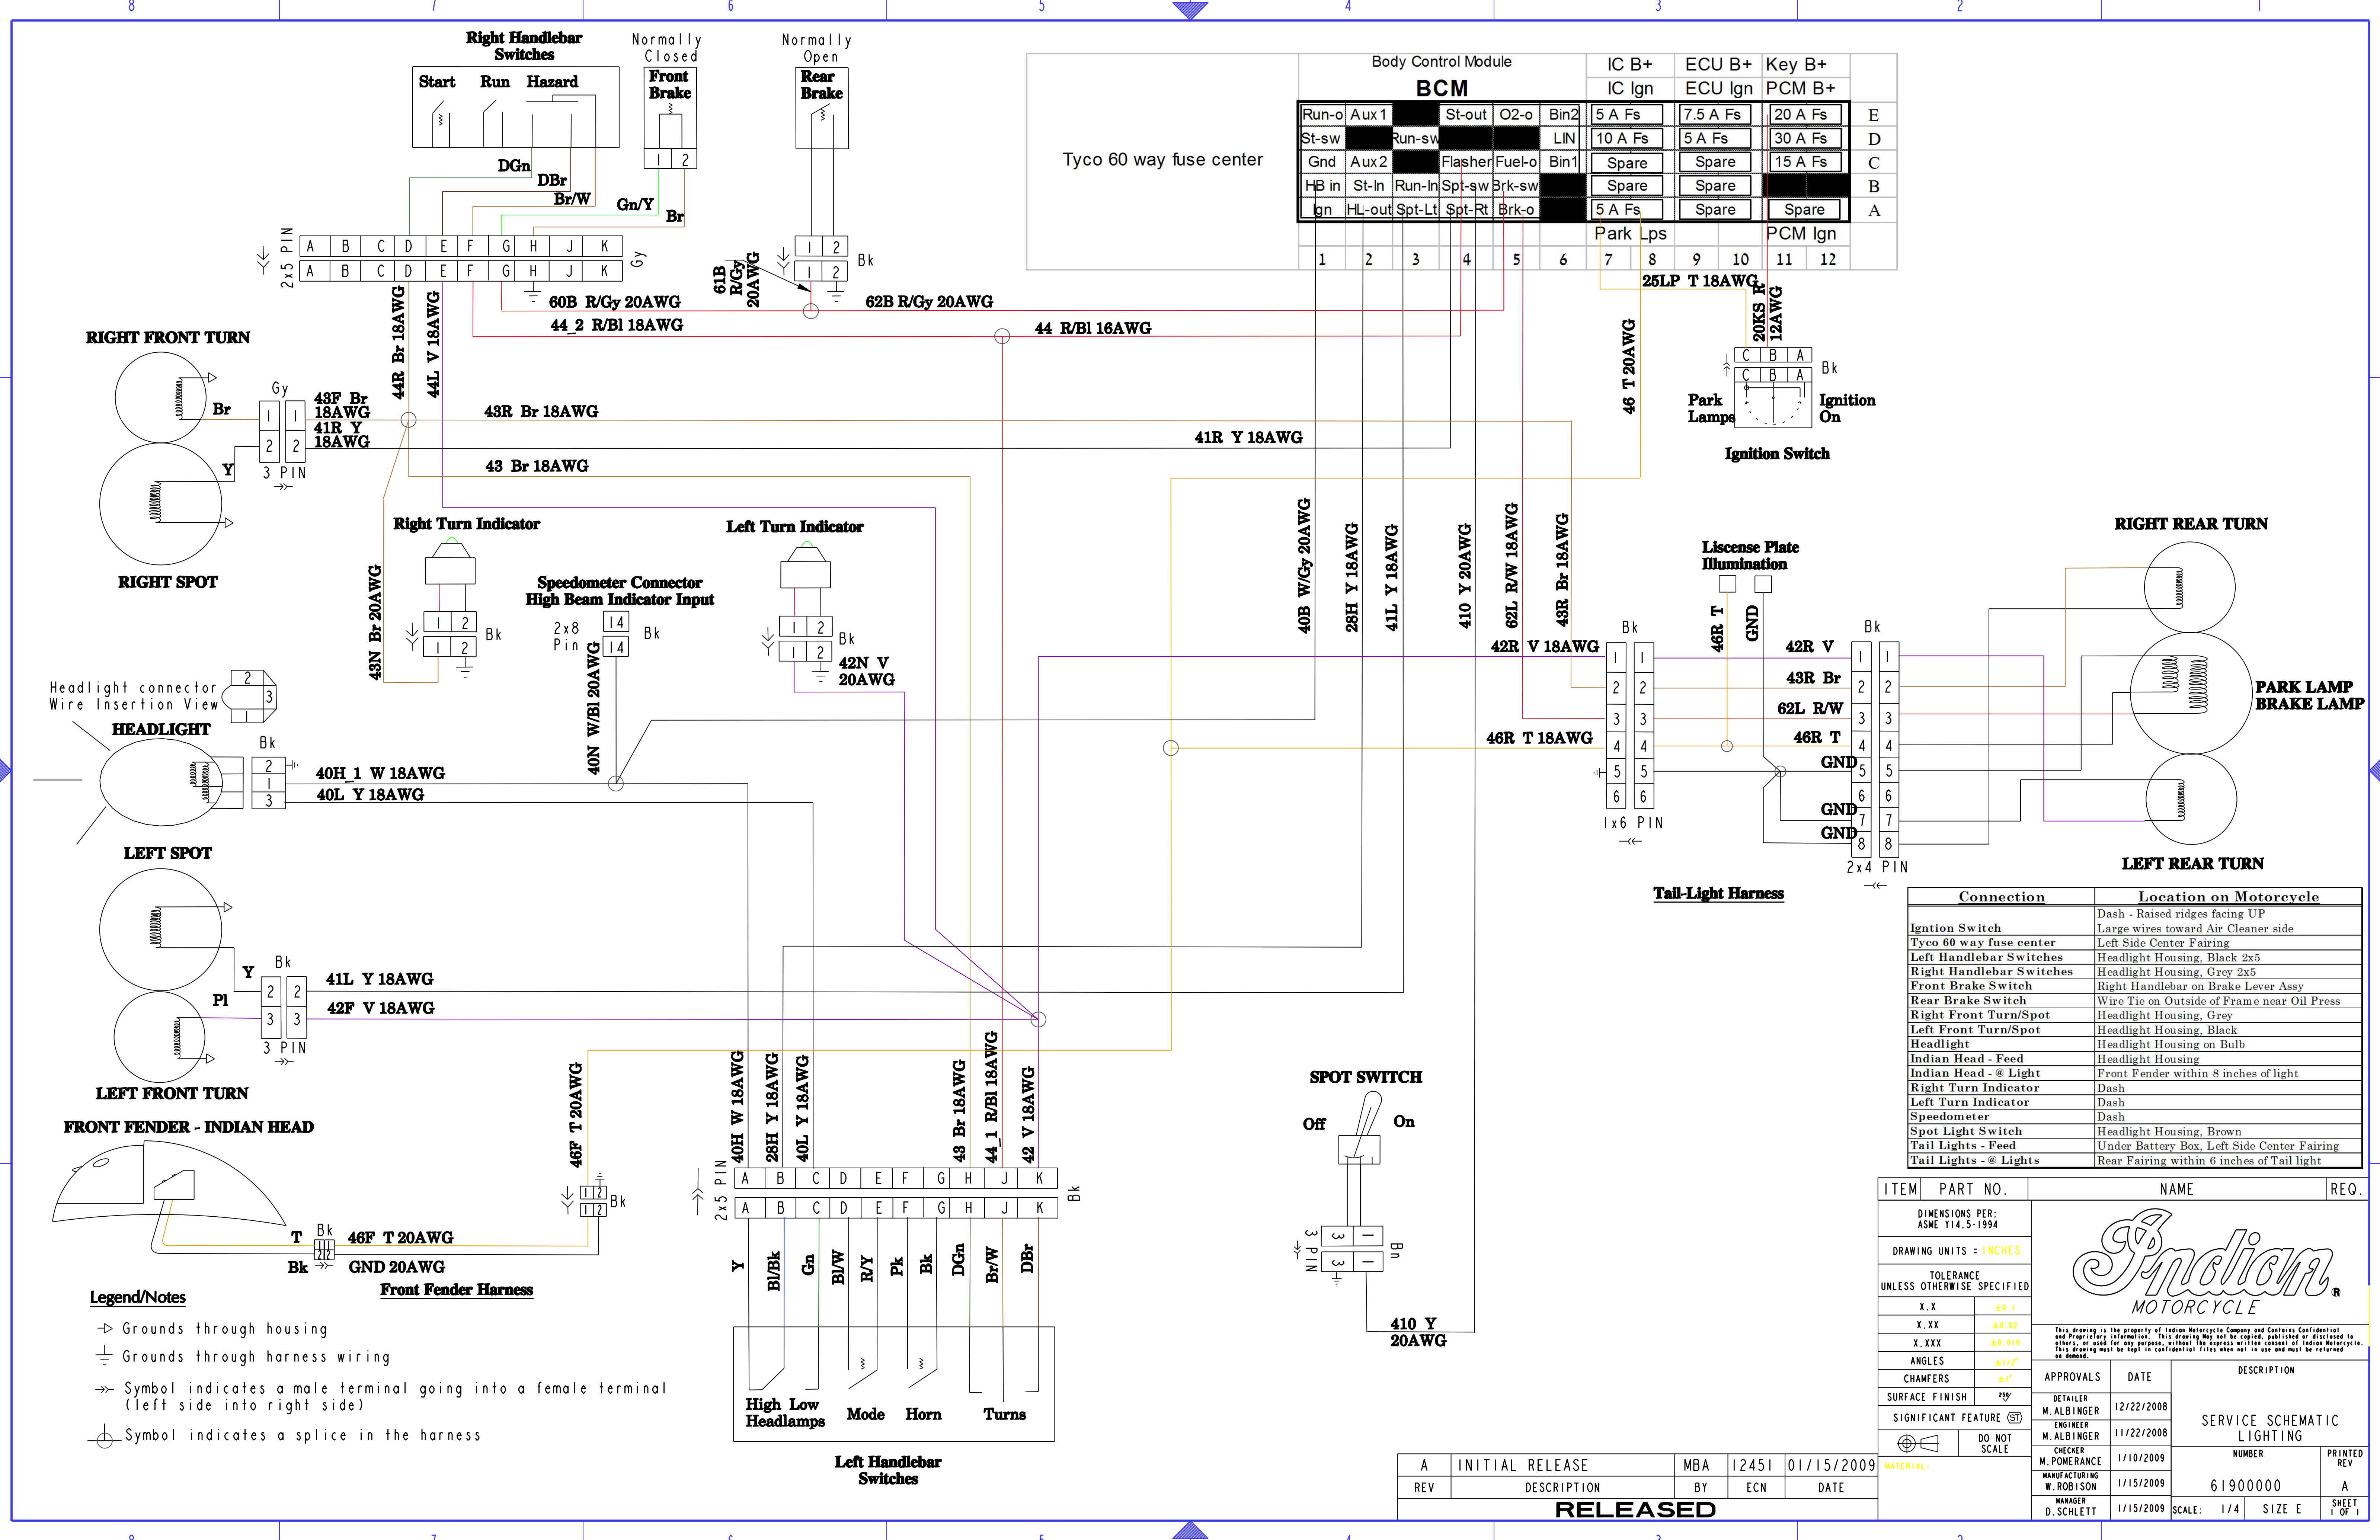

- Legend/Notes**
- ⇒ Grounds through housing
 - ⊥ Grounds through harness wiring
 - ⇒ Symbol indicates a male terminal going into a female terminal (left side into right side)
 - ⊕ Symbol indicates a splice in the harness

Connection	Location on Motorcycle
Ignition Switch	Dash - Raised ridges facing UP
Tyco 60 way fuse center	Left Side Center Fairing
Left Handlebar Switches	Headlight Housing, Black 2x5
Right Handlebar Switches	Headlight Housing, Grey 2x5
Front Brake Switch	Right Handlebar on Brake Lever Assy
Rear Brake Switch	Wire Tie on Outside of Frame near Oil Press
Right Front Turn/Spot	Headlight Housing, Grey
Left Turn/Spot	Headlight Housing, Black
Headlight	Headlight Housing on Bulb
Indian Head - Feed	Headlight Housing
Indian Head - @ Light	Front Fender within 8 inches of light
Right Turn Indicator	Dash
Left Turn Indicator	Dash
Speedometer	Dash
Spot Light Switch	Headlight Housing, Brown
Tail Lights - Feed	Under Battery Box, Left Side Center Fairing
Tail Lights - @ Lights	Rear Fairing within 6 inches of Tail light

ITEM	PART NO.	NAME	REQ.
DIMENSIONS PER: ASME Y14.5-1994			
DRAWING UNITS = INCHES			
TOLERANCE UNLESS OTHERWISE SPECIFIED			
X.X	±0.1		
X.XX	±0.02		
X.XXX	±0.010		
ANGLES	±1/2°		
CHAMFERS	±1°		
SURFACE FINISH	z27		
SIGNIFICANT FEATURE	ST		
DO NOT SCALE			
APPROVALS		DATE	DESCRIPTION
DETAILER M. ALBINGER		12/22/2008	SERVICE SCHEMATIC LIGHTING
ENGINEER M. ALBINGER		11/22/2008	
CHECKER M. POMERANCE		1/10/2009	
MANUFACTURING W. ROBISON		1/15/2009	
MANAGER D. SCHLETT		1/15/2009	NUMBER 61900000
		SCALE: 1/4	SIZE E
			PRINTED REV A SHEET 1 OF 1

A	INITIAL RELEASE	MBA	12451	01/15/2009
REV	DESCRIPTION	BY	ECN	DATE

RELEASED